

The Channel Soap Dispenser

TSL.C.040

Fully compatible with the The Splash Lab Soap Refill System, the automatic foaming nozzle reliably produces a precise dose of soap every time. The system is easily maintained, with the foaming nozzle simple and quick to replace.

Finish	Codes	LRV*
Black	TSL.C.040.BK	3
Brass	TSL.C.040.BR	40
Polished	TSL.C.040.C	58
Brushed	TSL.C.040.CS	51
Copper	TSL.C.040.CP	19

Light Reflectance Value*











USA: +310 410 5008 www.thesplashlabusa.com info@thesplashlabusa.com Making the ordinary, extraordinary

Technical Data

Weight	2lb 3oz	
Recommended soap viscosity	Foam soap - <10cPs. Not suitable for liquid soaps, alcohol gels or hand sanitisers.	
Stainless steel grade	AISI 316 Stainless steel	
Sensor range Preset	5-2 9/32"±19/32" (nonadjustable)	
Power supply - Mains	Input: 100 - 240V AC; 50 - 60Hz Output: 6V DC; 1.5A, 9W max	
Power supply - Battery	6V Type AA x 4 pcs Alkaline (not included)	
Standby power	9mA	
Warranty	1 year parts and labor	
Recommended soap system	The Splash Lab automatic soapfeed system	
Force load capacity	88 - 110 lbs	

Installation requirments

Wall cut-out (dial	ø 7/8"	
Maximum countertop thickness	1 3/8"	
Anti-rotation collar	Included	
Reflective surfaces	Not to be installed above highly polished basins	
Access requirements	Pumps and transformers must be accessible at all times for servicing	
Cabling	IP68 rated transformer; low voltage push fit connector to soap dispenser	
Power supply	Hard wired connection to mains branch circuit, It is recommended that the sensors are installed on their own circuit	
Sensor distance	To avoid continuous dispensing, install this fixture with at least 7" of clearance beneath the sensor. Ensure the dispensing head is positioned over the interior plane of the basin.	

Compliance & certificates

CE, UL, cUL, RoHS, ADA

USA: +310 410 5008 www.thesplashlabusa.com info@thesplashlabusa.com Making the ordinary, **extraordinary**

Included

Dispenser head assembly

Pad (already installed)

Gasket

Washer

Fixing nut

Soap foaming pipe

Soap reservoir - 0.4 gallons

Hex wrench/ Soap outlet

Soap foamer pump unit

Power supply unit

Not included


Soap

Plug socket (must be provided prior to installation)

Optional faceplate (specified separately)

Warranty

1 Year parts and labor.

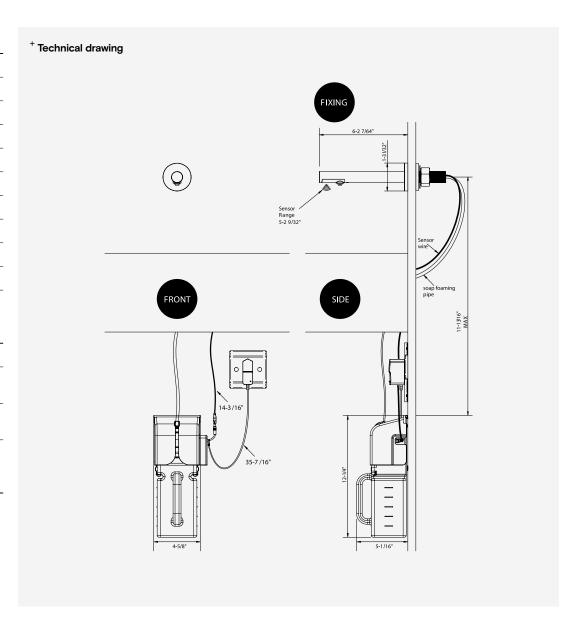

Spare parts

If a situation arises where you require replacement components outside of a maintenance contract, there may be provision to obtain spare parts. Providing the components are under warranty and the parts have become non-functioning during normal use within their assumed usable life, they may be replaced. Should a replacement mains power supply be required it is imperative that an identical type is used. Contact **The Splash Lab** for further information.

Part	Codes
Control Box	TSLP.230286
Plug-in Power Supply	TSLP.230283

Related products



The Channel Faucet TSL.C.050



The Channel Hand Dryer TSL.C.060

USA: +310 410 5008 www.thesplashlabusa.com info@thesplashlabusa.com Making the ordinary, **extraordinary**