


SOLID SURFACE

Use & Care Guidelines

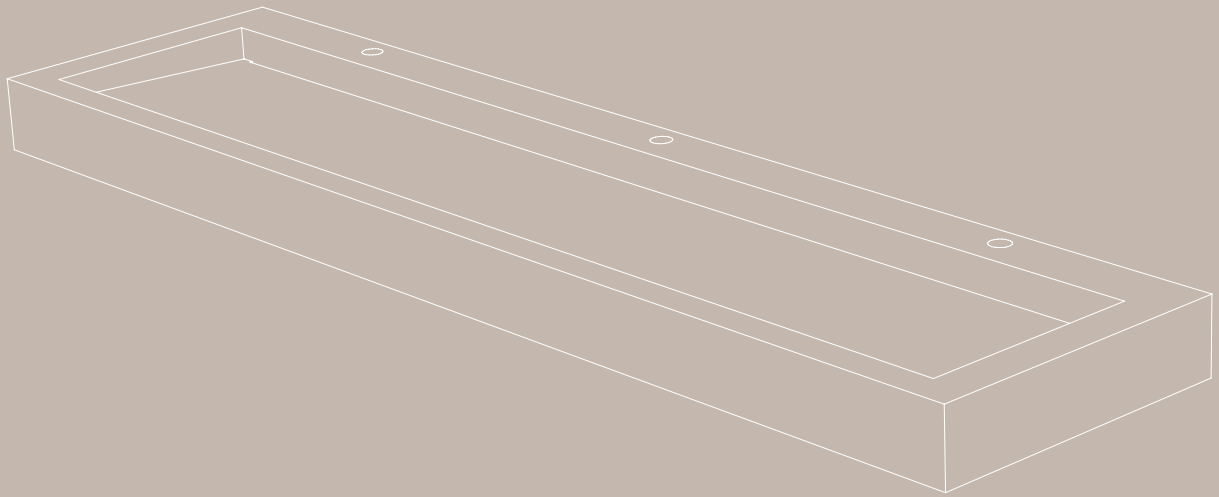

installation + maintenance

+ THE
SPLASH
LAB

solid surface

use & care guidelines

you have just introduced the splash lab solid surface into your washroom...

...it is the elegant, hygienic long lasting solid surface material used for the leading-edge designer washbasins. These guidelines will answer your questions on how to use and care for washtroughs wherever you have chosen to install it. Like all decorative materials, The Splash Lab Solid Surface responds best when handled with care.

solid surface

use & care guidelines

how to clean the splash lab solid surface products

daily cleaning

Although liquids cannot penetrate the material, it is best to wipe up spills as they occur. Just use the dampened microfibre cloth provided with a standard household kitchen spray. Always clean in a circular motion. If a stain needs more attention, refer to our cleaning methods stated on page 4.

once or twice a week

Accidental spills of strong chemicals (eg paint stripper, brush cleaners, metal cleaners, cleaners containing methylene chloride, acid drain cleaners, acetone based nail varnish removers etc) should be flushed promptly with plenty of soapy water to avoid damage to the surface. For nail varnish spills, non-acetone based remover can be used, and then flushed with water. Undetected or prolonged exposure to chemicals may damage the surface.

solid surface

use & care guidelines

quick guide to the splash lab solid surface cleaning

COMMON HOUSEHOLD SPILLS	PROCEDURE
For everyday cleaning	A-B-D
Vinegar, coffee, tea, lemon juice, vegetable, dyes, ketchup	A-B-C-E-I
Grease, fat & oil residues	A-B-C-D-I
Hard water scale, soap, minerals	A-B-F-I
Lily pollen, saffron, a light scratch, cigarette burns, shoe polish, ink, marker pen	A-B-C-E-I
Mercurochrome, blood, red wine, perfume	A-B-C-D-E-I
Nail varnish spills	A-B-C-G-I
Iron or rust	A-B-C-H-I
Iodine, mildew	A-B-C-E-I

CLEANING METHODS*	
A	Remove excess with a soft cloth
B	Rinse surface with warm water & dry with a soft cloth
C	Use a damp microfibre cloth & The Splash Lab cleaner provided
D	Use a microfibre cloth & rub over the stain with a standard household kitchen spray
E	Use a microfibre cloth & rub over the stain with some diluted bleach.* Rinse thoroughly with a soft cloth.
F	Use a microfibre cloth & rub over the stain with some standard household lime-scale remover or vinegar. (eg Viakal). Rinse thoroughly with warm water & dry with a soft cloth.
G	Use a microfibre cloth & rub over the stain with a non-acetone based nail varnish remover.
H	Use a microfibre cloth & rub over the stain with a metal cleaner or rust remover.
I	If the stain persists, contact The Splash Lab Technical Department.

*Always clean using a circular motion. Please note, bleach can discolour the surface if not removed completely by rinsing with water afterwards.

solid surface

use & care guidelines

warranty

We believe the future is personal. With a global mindset, we challenge conventional restroom norms via product innovation to create considered washroom solutions for corporate and educational spaces. We use rich raw materials, cutting-edge automation and considered washroom design to powerfully and positively influence the lives of people. We are The Splash Lab.

Demonstrating our commitment to quality and our belief in the strength of our designs, we can offer the following warranties.

The Splash Lab will warrant that its products will be free of manufacturing and material defects during normal use and environmental conditions as detailed below:

Monolith hand wash units 1 year for manufactured product; 10 years for material used

If a defect is found in normal use, The Splash Lab will, at their discretion, repair, provide a replacement part or product, or make appropriate adjustments. Damage caused by accident, misuse, or abuse is not covered by this warranty. Improper care and cleaning will void the warranty.

Non-operation of the product due to environmental conditions beyond our control, installation error, incorrect maintenance, water quality, fair wear and tear, incorrect or inappropriate installation, misuse and abuse is not covered by the warranty.

Proof of purchase (original sales receipt) must be provided to The Splash Lab with all warranty claims. The above warranty is valid for goods supplied within North America.

For goods supplied outside of North America, The Splash Lab will honour the above stated warranty periods for the parts only.

THE SPLASH LAB DISCLAIM ANY LIABILITY FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

solid surface

use & care guidelines

the splash lab solid surface durability

The Splash Lab Solid Surface is inherently 'renewable' because it is solid and homogeneous all the way through. Most damage, including severe impact, heat or chemical damage, can usually be repaired on site (though not covered by warranty) to restore the original, smooth, hygienic solid surface integrity. This is the beauty of The Splash Lab Solid Surface!

contact



General information

info@thesplashlab.com

+1 310 410 5008

5450 W 83rd St, Los Angeles CA90045

500 7th Ave, New York NY10018

Technical support

technical@thesplashlab.com

For further contact information visit:

www.thesplashlab.com

